


## Changing Flex-Boom Microphones

Prepare a work area with a soft cloth to capture small screws if dropped during disassembly and reassembly. You will use a #1 Philips and #0 Philips screw driver.


- 1) **Remove the Mic Sock Retaining O-Ring and slide off the Mic Sock**

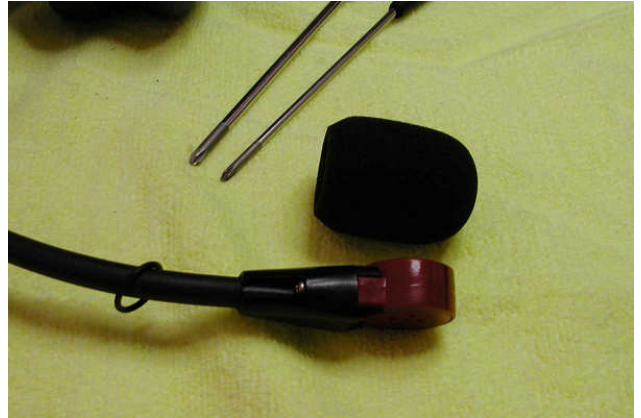


- 2) **Remove the holder retaining screws (2) places using the #1 Philips screw driver**




- 3) **Remove the Connector Set Screws using the #0 Philips screw driver**

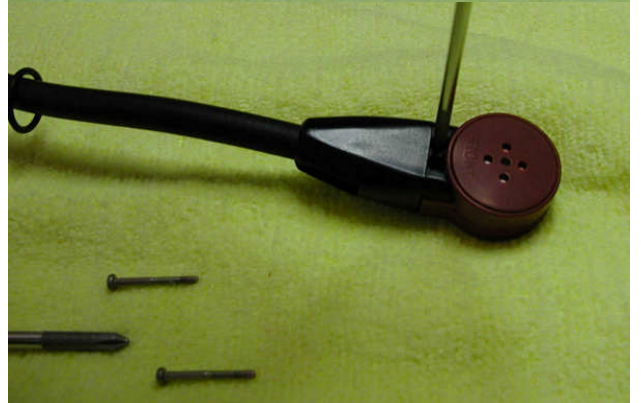


- 4) **Slide Mic off connector pins**

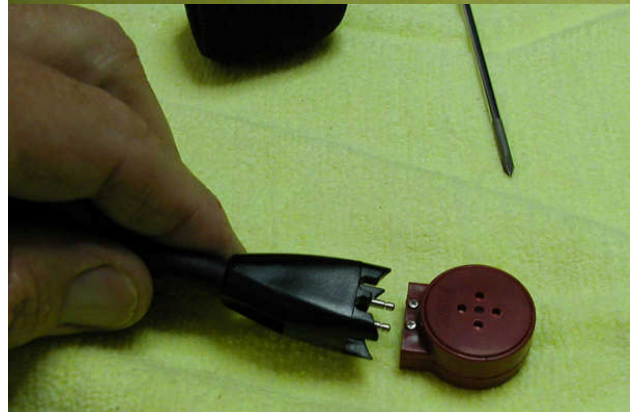

**5) Snug the Mic Set Screws for Mic storage using the #0 Philips screw driver**

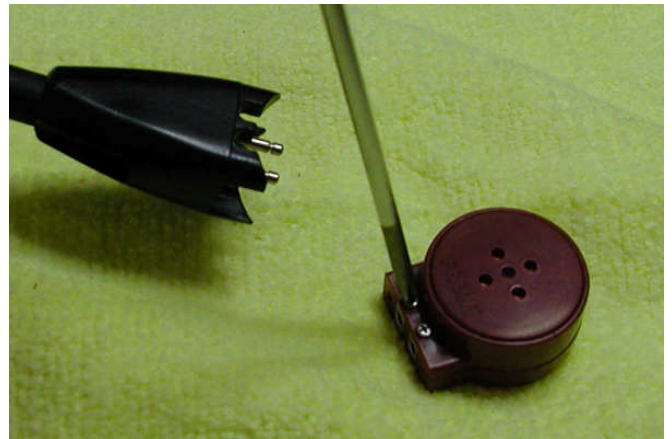


**6) Loosen Set Screws on New Mic using the #0 Philips screw driver**

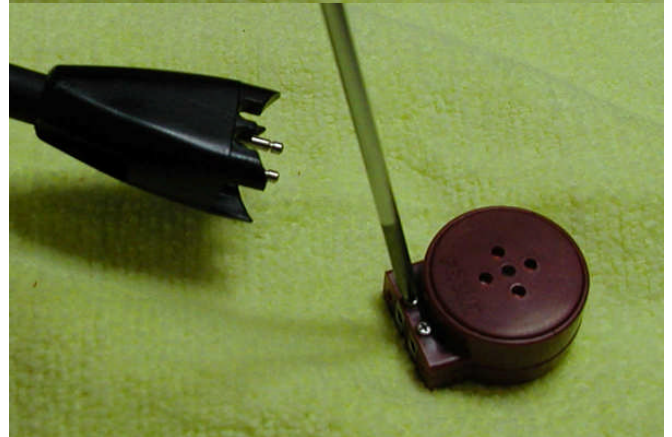


**7) Slide New Mic into position, seating it on the Mic Holder**



**8) Reinstall Boom holder attachment screws**  
If you intend to change the Mic often these may be set aside and stored with your optional Mic(s) **using the #1 Philips screw driver**

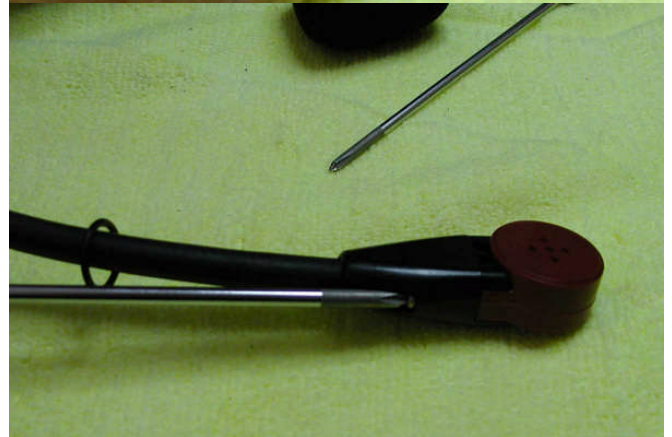

**9) Tighten (gently) the Mic set screws on the Boom Connector Pins using the #0 Philips screw driver**

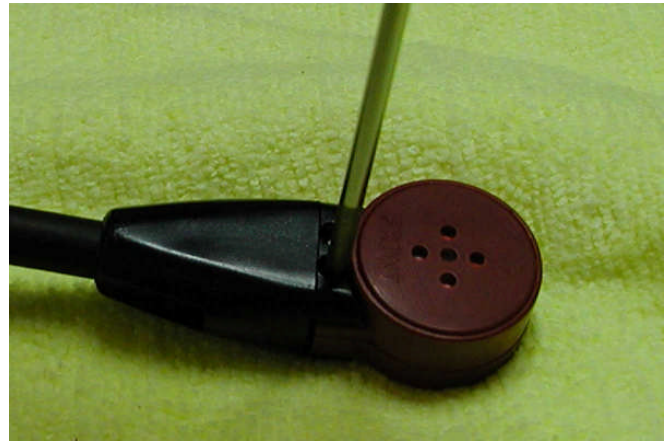

**10) Slide Mic Sock back over the new Mic and reinstall the O-ring over the end of the sock with the smooth surface of the Philips screw driver shaft to secure it.**

